


USER MANUAL

ENERPAK SERIES

Congratulations!

Thank you for choosing the uNu Micro. This powerful portable battery is designed to help you charge almost any mobile device quickly and easily. Please make sure to read this instruction manual carefully to learn how to get the most out of your new uNu Micro.

Product Overview

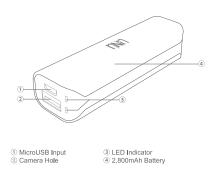


ENERPAK SERIES

Technical Specifications

Capacity	2,800mAh
Input	5V/1.0A
Output	1.0A
Dimensions	110 x 42 x 19mm
Weight	3.0oz

Charging Your uNu Micro

- 1. Using the Micro USB charging cable, insert the Micro-USB adapter into the Micro Micro-USB input port.
- 2. Connect the other end of the Micro USB charging cable into a USB adapter connected to a wall socket or a charging USB port on a computer.



ENERPAK SERIES

How to Use the uNu Micro to Charge other Products

- 1. Press the power button once to turn ON.
- 2. Using the Micro USB charging cable, insert the USB adapter into the USB port on the Micro
- 3. Connect the Micro-USB end of the Micro USB charging cable into the product that needs to be charged.
- 4. The Micro will automatically turn OFF after 30 seconds of non-use.



ENERPAK SERIES

Warranty

We at uNu, are committed to building quality products that demonstrate superior performance and 100% customer satisfaction. We are so confident in our products that we provide a 1-year warranty from the date of purchase on all of our products. Make sure to check out for more information.

FAQ

1. How long does it take to charge my Micro?

While there are many different ways to charge the Micro, the average time to charge from a desktop computer is about 2-3 hours. Some chargers might be faster or slower depending on output.

2. Can I use my own USB cable to charge other devices?

Our specialized Micro USB cable is specifically built to yield the most efficient results while charging. Therefore, it is highly recommended that you use the original cable. However, you

ENERPAK SERIES

can use other charging cables but efficiency may be greatly reduced.

3. How do I read the LED indicator?

When charging, the LED light will shine solid red. When fully charged, the LED light will turn OFF. Finally, when charging another device, the LED light will glow solid blue.

4. What devices can I charge with my uNu Micro?

The uNu Micro can charge almost any mobile device, including most tablets and smartphones. Make sure to read your user's manual on any products that you wish to charge to ensure they are compatible with the uNu Micro before recharging.

5. How do I turn off my Micro?

The Micro will automatically turn off after 1 minute of non-use. Or you can press and hold the power button located on the top-right side of the Micro until the LED lights turn off. This should take no more than 3 seconds.

ENERPAK SERIES

Warnings

Read all the instructions before using this product. Failure to read and follow these safety instructions could result in fire, explosion, electrical shock or other hazard, causing serious and/or fatal injury and/or property damage, for which damages you, ("Purchaser") not uNu are liable.

- **1**. Do not modify, disassemble, open, drop, crush, puncture or shred the product.
- 2. Do not expose the product to rain or water.
- **3**. Keep away from open flame of sunlight to prevent heat build-up.
- 4. Keep away from high voltage devices.
- **5**. This product is not intended for children and is not a toy. Keep away from children.
- **6.** Ensure that all persons who use this product are familiar with the safety guidelines set forth in this manual.

ENERPAK SERIES

www.myunu.com

This product is covered by our **1-year warranty**